

Quick Start Guide



What's in the box?

In the box you will find the **RIPCORDER Streaming TV & Media Player**, HDMI cable, power cable, remote control and user manual. Please note that the remote requires two AAA batteries which are *not* included.



1. Plugging the RIPCORDER in.. (yes, we get the irony)

- Take the cover off of the back of the remote control and insert 2 AAA batteries.
- Connect the HDMI cable from the **RIPCORDER Streaming TV & Media Player** to the TV
- Connect the power cable to the **RIPCORDER Streaming TV & Media Player** to the wall socket.
- IF you have a network cable that you would like to use, plug it in to the **RIPCORDER Streaming TV & Media Player**.
- Ensure that your TV is on and that the input source is set to the HDMI input that the unit is connect to.
- Press the red power button on the remote (remote must always be pointed directly at the **RIPCORDER Streaming TV & Media Player** to function correctly).
- Wait for the media player to complete the boot sequence.

Quick Start Guide




2. Initial Set-up..

You may need to adjust the set-up of the **RIPCORN Streaming TV & Media Player** to tailor it to your specific TV's needs.

Here's how:


3. Connect to the Internet..

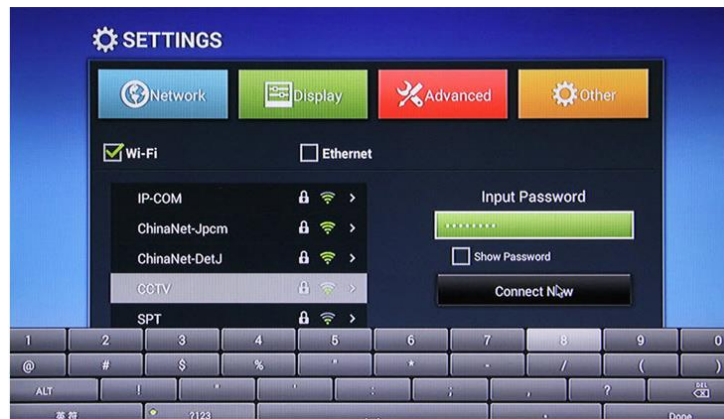

- Open settings by pushing the red button on the remote called “Setup”
- Ensure the Wi- Fi box has a checkmark in it
- Click on the name of the WI- Fi signal you would like to connect to
- Enter the Wi- Fi password
- Click the “Connect Now” button
- Wait for the connecting message to indicate “Wi- Fi Connected”
- Push the Home button on your remote to return to the main screen

4. Adjust the Display:

HDMI Auto- Detection works with most new TVs however, if your **RIPCORDER Streaming TV & Media Player** is not perfectly displaying on your TV you can manually adjust the HDMI output.

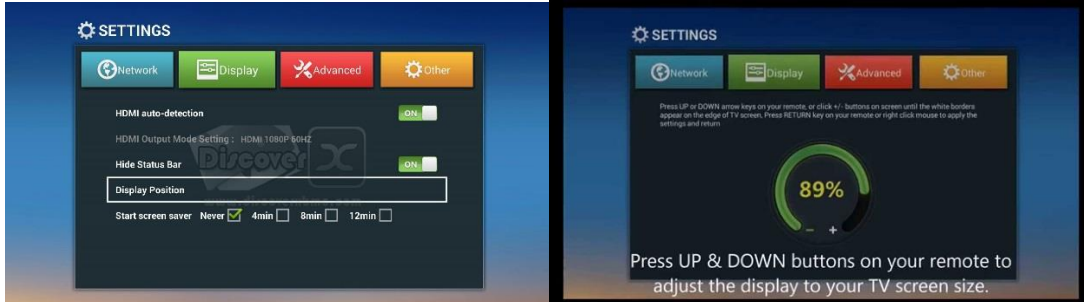

- Open settings by pushing the red button on the remote called “Setup”
- Click on the “Display” tab
- Set HDMI auto- detection to “Off”
- Set the HDMI Output Mode Setting to your TV’s required setting
- Click on “Display Position” button and zoom out the display until the entire setting screen fits your TV display (a black border will appear when zoomed out too far)
- Push the Home button on your remote to return to the main screen

5. Basic Navigation

There are two main systems on your **RIPCORDER Streaming TV & Media Play**.

- KODI
- Android

The Android system works just like an Android phone. You can browse the internet, install Apps from the GooglePlay Appstore etc.. We strongly recommend that you use a USB or Bluetooth keyboard and mouse if you intend to unlock the full power of the Android operating system.

The **RIPCORDER Streaming TV & Media Play** will boot in to the KODI system automatically however, you can launch KODI by clicking on the K icon (on the bottom left) from the Android home screen.

6. Need More Help?

Email directly us at: support@CutTheCordCanada.com
or Navigate to: www.CutTheCordCanada.com/Contact/
and send us your questions.